

# DOT Kitchen einrichten/Verbinden

1. Burgermenü öffnen.



The screenshot displays the TOBO POS system interface. At the top, the status bar shows 'TECHNIKER', 'AUßER HAUS', a search icon, a headset icon, a person icon, and the time '08:17'. Below this, the main menu is visible, with the 'Burger' category selected. The menu items are organized into columns and rows, with prices listed in Euros (€). The interface also includes a top right section for 'Verkauf' (Sales) and 'Kunde' (Customer), and a bottom right section with a numeric keypad and a green button with a Euro symbol.

Category	Item	Price
Burger	Hamburger HM S	€ 5,80
	Hamburger HM D	€ 7,80
	Chiliburger HM S	€ 6,00
	Chiliburger HM D	€ 8,00
	Cheeseburger HM S	€ 6,20
	Cheeseburger HM D	€ 8,20
	Kreuzburger HM S	€ 6,30
	Kreuzburger HM D	€ 8,30
	BBQ Burger HM S	€ 6,80
	BBQ Burger HM D	€ 8,80
Vegetarisch	Hawaiiburger HM S	€ 6,80
	Hawaiiburger HM D	€ 8,80
	Oranienburger HM S	€ 6,80
Chicken	Oranienburger HM D	€ 8,40
	Tempelhofer HM S	€ 6,80
	Tempelhofer HM D	€ 8,80
Menü	Blue Cheese HM S	€ 7,10
	Blue Cheese HM D	€ 9,10
	Weddinger HM S	€ 7,40
Menü Lieferando	Weddinger HM D	€ 9,40
	Charlottenburg HM S	€ 7,60
	Charlottenburg HM D	€ 9,60
Gutschein	Schöneberger HM S	€ 7,60
	Schöneberger HM D	€ 9,60
	Friedrichshain HM S	€ 7,60
Aktion	Friedrichshain HM D	€ 9,60
	Wilmersdorfer HM S	€ 7,80
	Wilmersdorfer HM D	€ 9,80
FAVORITEN	Burgerboulette HM S	€ 2,00
	Burgerboulette HM D	€ 3,50

# DOT Kitchen einrichten/Verbinden


2. Einstellungen  
öffnen.

The screenshot displays the TOBO POS interface. On the left, a red vertical sidebar contains several menu items: 'Z Bericht', 'X Bericht', 'Bargeldbewegung', 'Programmierung', 'Einstellungen', 'Fernbedienung', and 'Cloud'. A black arrow with the number '2' points to the 'Einstellungen' (Settings) icon, which is a gear. The main screen shows a menu grid with items like 'Salami', 'Schinken', 'Putenbr', 'Bacon', 'Hawaii', and 'fisch'. The top right corner shows the user 'Kerstin' and the date 'Dienstag 18 November 2025 09:45'. The bottom right corner shows a numeric keypad and the version 'version: 2.10.3 MagIQ'.

Normal	Salami	Schinken	Putenbr	Bacon	Hawaii	fisch
€ 8,50	€ 8,50	€ 8,50	€ 9,00	€ 9,00	€ 9,00	€ 9,50
Rich Deal	Sandw Salami Schi	Sandw Bacon Combo	Sandw Pulled Pork	Sandw BBQ-Beef	Sandw Hähnchen	Sandw Sucuk
€ 9,50	€ 9,50	€ 10,50	€ 10,50	€ 9,00	€ 9,00	€ 9,00
no Deal	Sandw Käse	Sandw Veg Nuggets	Sandw Falafel	Sandw Pulled BBQ	Sandw Spicy Asia	
€ 8,50	€ 9,50	€ 9,00	€ 9,00	€ 9,00		

# DOT Kitchen einrichten/Verbinden

3. Mit dem PIN  
„9626“ anmelden.

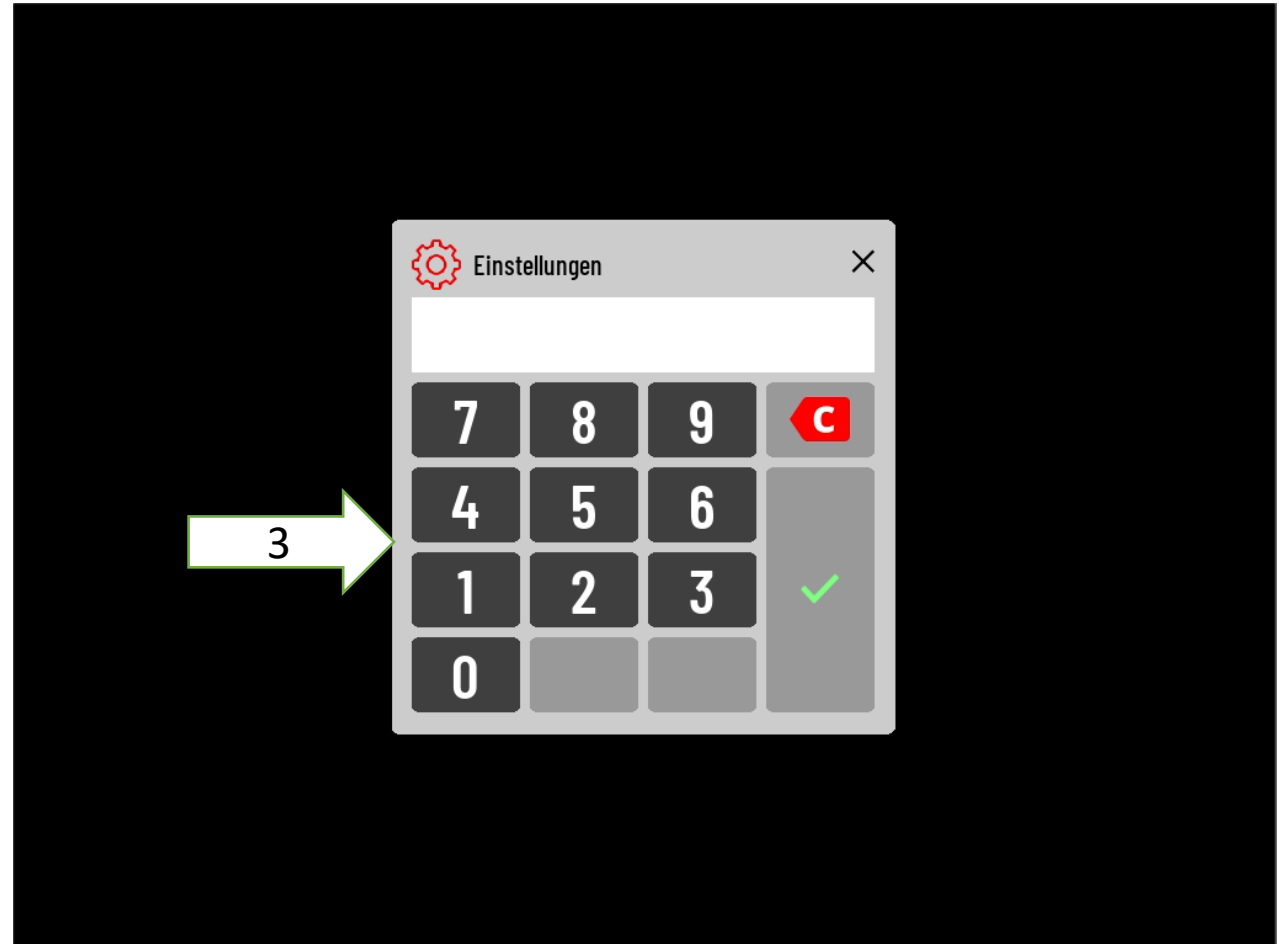

# DOT Kitchen einrichten/Verbinden


4. „Drucker“ öffnen.

5. Einen Drucker in der Roten Spalte auswählen.

6. Art des Druckers bestimmen (Hier Dot Lan)

7. Drucker-ID bestimmen.

(Bei einem Drucker ist es immer die ID1).

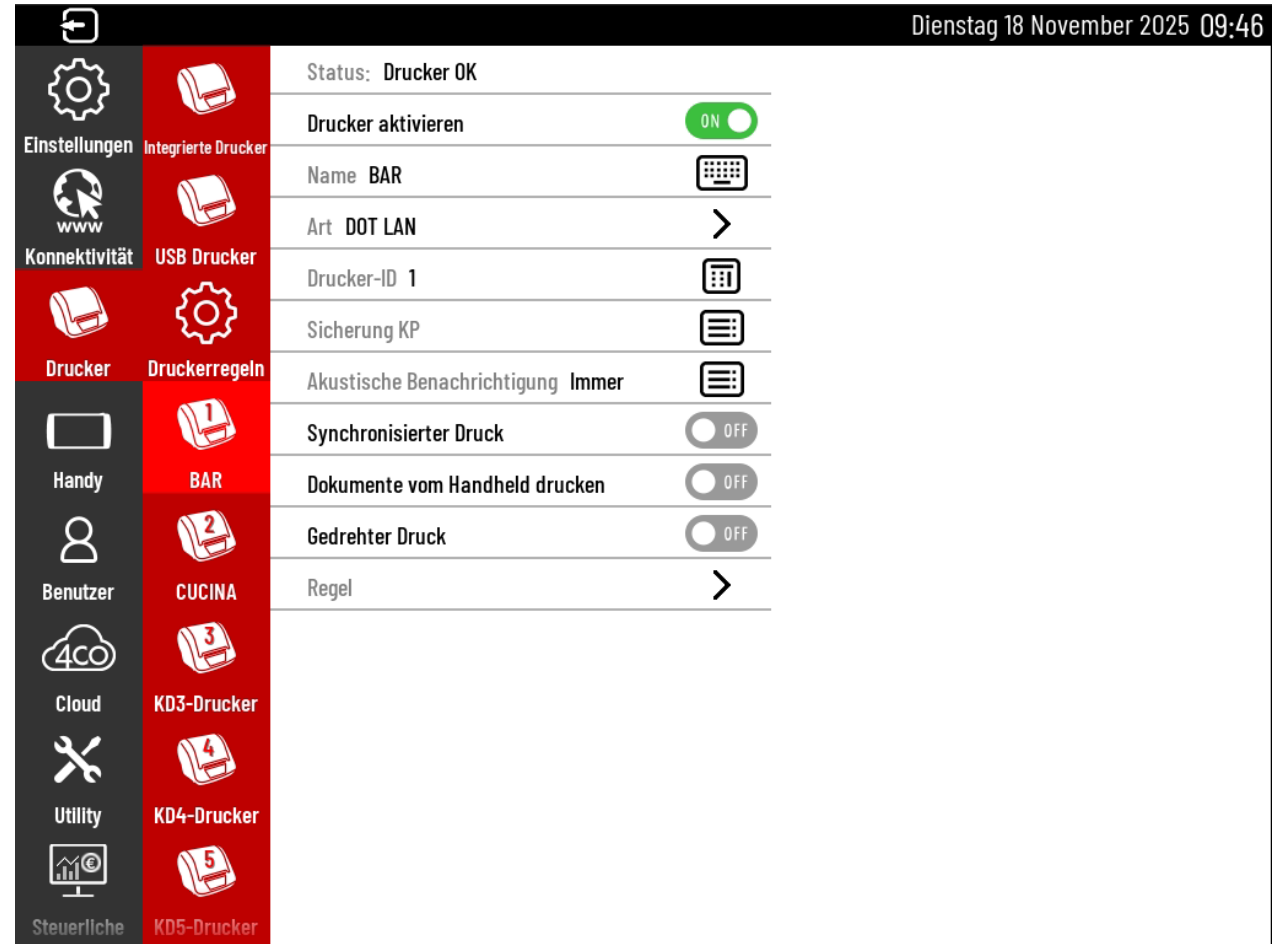

# DOT Kitchen aeinrichten/Device ID ändern

1. Info Ausdruck am Drucker erstellen.  
(Drucker einschalten, per LAN-Kabel anbinden  
-> Ein-/Aushalter länger gedrückt halten, bis der Info Ausdruck erstellt wird.
2. Im Browser die IP-Adresse in der Suchleiste eingeben.
3. Mit „22747“ anmelden.



# DOT Kitchen aeinrichten/Device ID ändern

## 3. Settings öffnen



# DOT Kitchen aeinrichten/Device ID ändern

4. Device ID ändern (z.B. auf 2), die Adresse muss geändert werden, sobald mehr als 1 Drucker verwendet wird. Die IP-Adresse darf auf DHCP stehen bleiben, das die Device ID zum verbinden benötigt wird.

5. Save Settings.



Device ID

Print Intesity [1..20]

Beep on paper cut

DHCP Mode

Ip Address

Netmask

Gateway

DNS 1

DNS 2